

PDWM2000

WIRELESS MICROPHONE

OPERATING INSTRUCTIONS

We greatly appreciate your purchase of our professional wireless microphone of good quality. To be sure you take maximum advantage of the features, read these instructions carefully and use the set properly.

SPECIFICATIONS

SYSTEM

| | |
|-----------------------|-------------------------|
| Range of frequency | 160-250 MHz |
| Frequency response | 40-15000Hz(± 3 dB) |
| Signal to noise ratio | 80dB |
| Operating temperature | 0°C-45°C |
| Distortion factor | $\leq 0.5\%$ |
| Effective field | 30M |

MICROPHONE

| | |
|---------------------|--------------------|
| Emission power | 8mW (maximum 50mW) |
| Frequency deviation | 22KHz |
| Antenna | built in |
| Power supply | DC 9V |
| Battery life | 8 hours |

RECEIVER

| | |
|-----------------------|--------------------|
| Reception mode | superhet |
| Audio output level | 25mV |
| output impedance | 600 Ohms |
| Reception sensitivity | 15dB/mV |
| Antenna | telescopic antenna |
| Power supply | AC 110V/220V 50Hz |

 
ACCESSORIES

| | |
|---------------------------------|------|
| 1. Two-end socket signal cable. | 2pcs |
| 2. Operating instructions | 1pc |
| 3. 9V battery | 2pcs |
| 4. Certificate of Warranty | 1pc |
| 5. Certificate of qualification | 1pc |


HOW DO YOU OPERAT IT?

1. Adjust the amplifier and Karaoke system , set the volume control to the minimum position. Connect the signal cable of receiver .Plug the power cord into AC outlet . Turn the power on .The corresponding indicator lights up that indicates the system is ready for operation .


- (1) power indicator
- (2) power switch
- (3) A channel volume
- (4) A channel indicator
- (5) A channel level
- (6) B channel indicator
- (7) B channel level
- (8) B channel volume

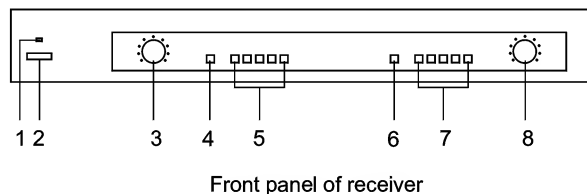

 - (9) B antenna
- (10) A antenna
- (11) B output
- (12) A+B output
- (13) A output
- (14) power cable

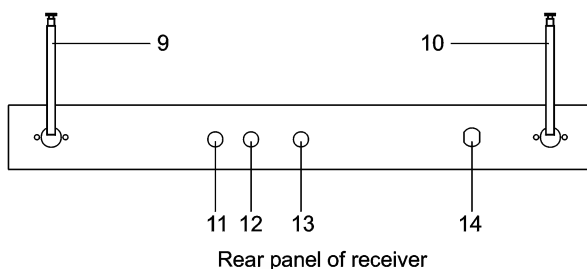


2. Open the cover of battery compartment (3) , insert a battery (9V) with the correct polarity and replace the cover . Set the power switch (2) to ON position and the indicator (4) will light up. The indicator of receiver lights up that indicates the system is ready for operation. Speak to the microphone, adjust the volume of receiver or amplifier according to your liking . You can also adjust the volume by turning the volume control (5) of the transmitter (only for clip-on microphone). To avoid shrill sound occur and that may damage the speaker and amplifier , please do not put the microphone point to the speaker.

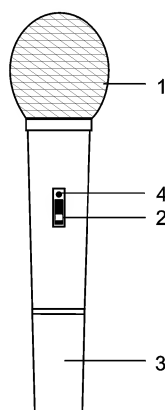 

hand-held microphone

 transmitter

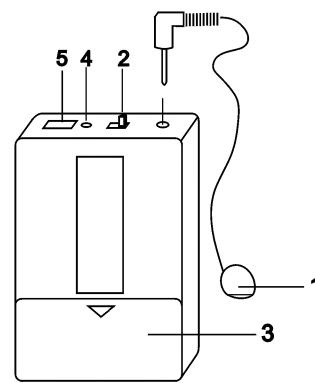

clip-on microphone

ATTENTIONS

1. If your microphone isn't used for a long period, the battery should be taken out and the power cord should be unplugged. If acoustic quality and volume are abnormal or receiving distance is shortened, the batteries in microphone should be replaced or the antennas should be pulled up.
2. To avoid interference, as far as possible do not put the receiver together with CD player and LD player.
3. To get the best transmitting effect, Don't touch the screen head(1) when singing.
4. Use the microphone in the range of 1m to 30m can get the satisfying effect.